GLARE SCREEN (FRONTAGE ROAD)

NOTE:
All Blades To Be Installed Perpendicular To The Plane Of The Barrier Top

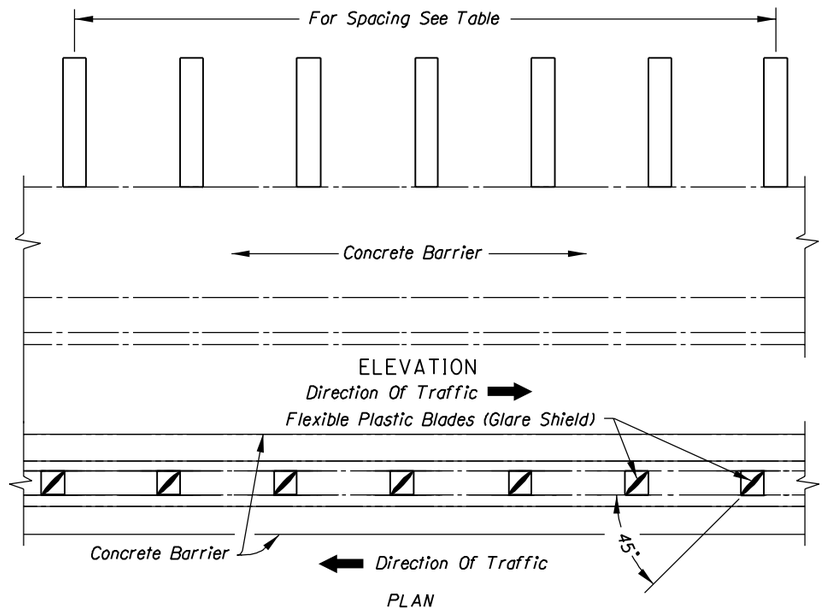

SIDE STA. TO STA.	*FLEXIBLE PLASTIC BLADES SPACING = CENTER TO CENTER	

* Spacing Is Based On 9½" Blade Width. If Narrower Blades Are Used, Spacing Will Be Reduced.

GLARE SHIELD INSTALLATION DETAIL

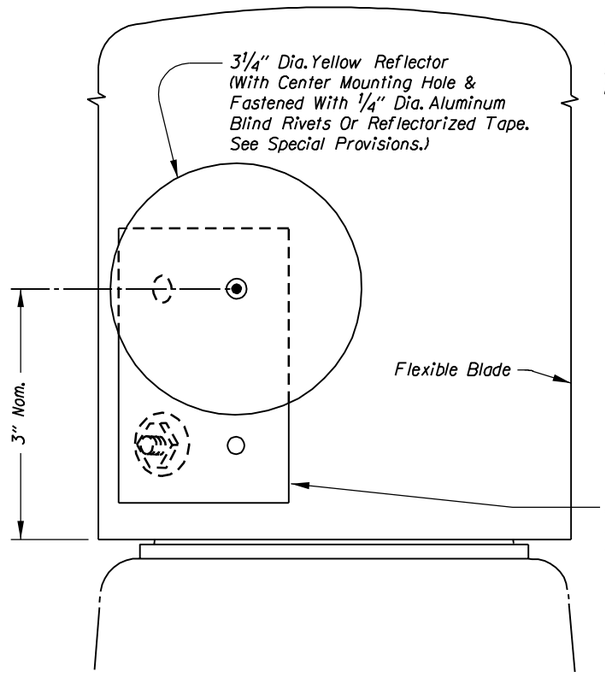

NOTE:
Install Reflectors Only On Median Barrier At 2'-6"± Intervals

REFLECTOR DETAIL

OREGON DEPARTMENT OF TRANSPORTATION

SHEET NO.

e_detail115.dgn 6-9-03

DET 115